SAFETY AND WARNINGS

- · Please check again whether the table is installed correctly and no missing parts are found before use.
- · Make sure that the table is lifted without any obstacles, and the length of the wire is suitable for the height range of the table.
- · This product is only suitable for dry working area, do not put in damp environment or soak table body.
- · It is strictly prohibited to pile up sundries under the table. Children are not allowed to climb the table to avoid affecting the lifting of the product or causing accidents.
- · When moving the table, please do not lift the table, to avoid damage caused by the table falling, should hold the table frame to move.
- · Make sure the table is always in a horizontal position. If the ground is not level, adjust the table feet to make the table horizontal.

AFTER-SALES AND WARRANTY

- · Non-product quality problems, man-made damage, the company will not provide warranty.
- · This product only warranty electric lifting parts (one year warranty), other parts belong to the loss of goods, do not provide warranty.
- · Electric lifting parts are more than one year, if there is a problem, you can contact the seller or manufacturer to maintenance.

TROUBLESHOOTING GUIDE

In use process, if display shows fault information or lift no reaction, first unplug the power cord, press and hold down about 20 seconds, fine-tuning key to reconnect the power cord, then according to the initialization process, initialize the elevator system (see note initialization), if the display shows Er1 Er2, please follow the above steps to reset initialization.


If you have other questions, please contact shernbao local dealers or directly contact shernbao company.


Tel: 400-658-8428



Stable Vertical Lift Adjustable Grooming Table

User Guide

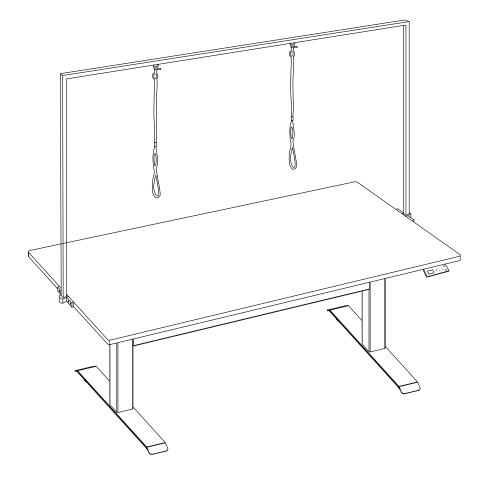


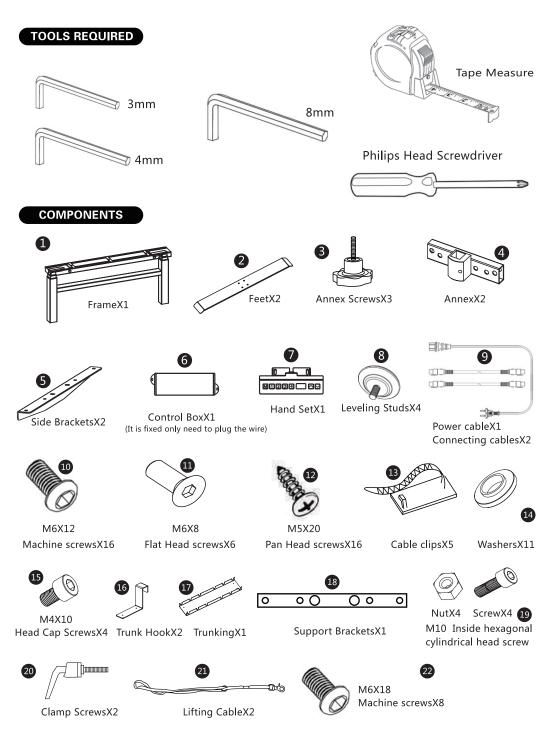

Please count accessories are complete, if there is a lack, please contact the seller.

For ease and safety, we recommend two people for assembly.

9 . After assembly the arm, insert the clamp downward and adjust it to the appropriate height. Then use the clamp screw to tighten it as shown in the figure helpon.

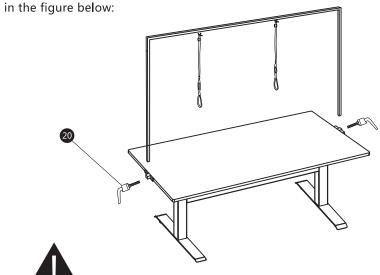


Caution

1


THE HANDSET SWITCH MUST INITIALIZE BEFORE USING.

Initialization: press on the down fine-tuning key (hold and do not release), until the desktop drops to the lowest height. After release, click the down fine-tuning key and release it. Then press on the down fine-tuning key again for about 10 seconds, until the desktop drops slightly, then rises slightly and stops, release the down fine-tuning key to complete initialization.

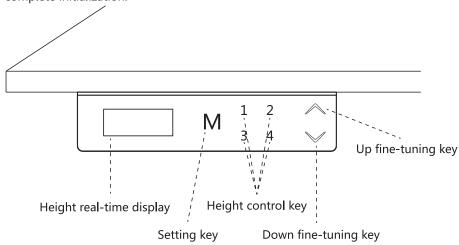


Height control key setting: Use the up fine-tuning key or the down fine-tuning key to raise or lower the height what you need. Click the setting key M and click the code to be set (any of the 1-4 height control keys) after releasing it to complete the setting. 7 . Use pan head screws to fix the handset switch to the table.

Align the top of the switch panel with the outside of the table.

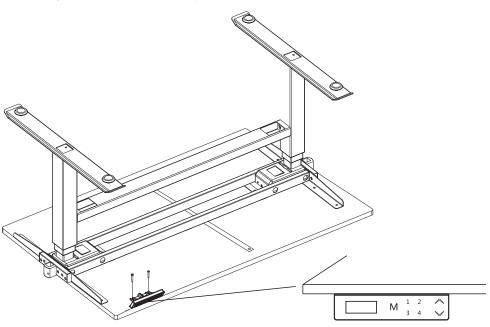


8. For line connection, there are two lines on both sides of the column, which are connected with the two lines in the master control box, and it can be inserted as shown in the figure below:

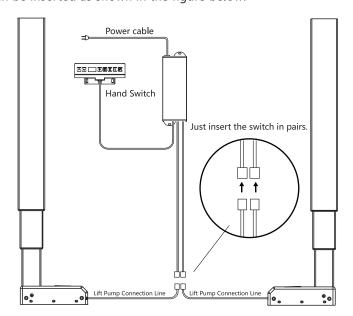


ASSEMBLY STEPS


1. Take the frame body out of the box, check for damage and deformation, and then invert the frame :

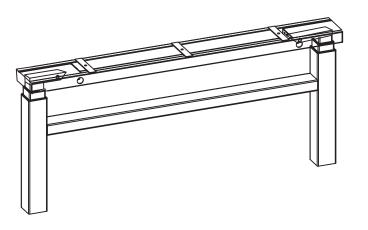

2. Align the two legs facing down to the bottom of the two stand columns, fix them with machine screws to ensure the locking is not loose, and then install the four leveling studs to the bottom of the feet.

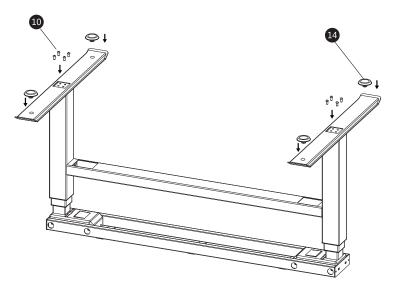


3. After installing the feet and leveling studs, put the whole frame in the right position, put two side brackets and one support bracket above the frame, and then lock it with flat head screws.

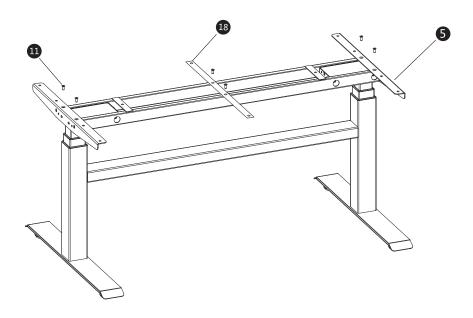


4. Fix the hanger fixture to both sides of the side bracket, fix it firmly with M6X18 screw and fix with M10 inner hexagonal cylindrical head screw to ensure locking.

As shown in the figure:

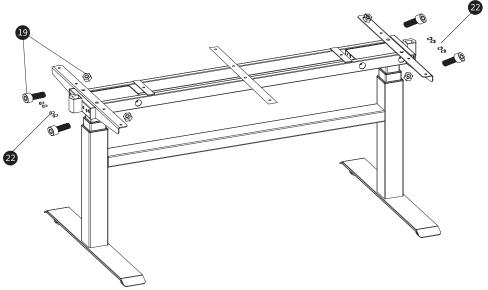

5. Place the trunk hook as one left and one right, merge the trunking from the bottom to the top, and lock it with M4 head cap screws.
Note that all connecting cables should be in the inner trunking.

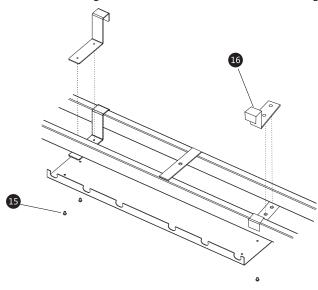

6. Place the table plate facing up horizontally, then invert the main crossbar end and buckle it upside down on the table plate.

Make sure the table plate is on the inside of the clamp on both sides of the crossbar end, and it is in center the front and rear positions, center the left and right, and then lock the table with pan head screws.

(Caution! Please place the fittings leather pad in the hole position. Prevent screw from penetrating table.)

