

200mm
80mm



PGT-310
寵物電推剪
PET TRIMMER

使用說明書
USER'S MANUAL



神寶寵物用品有限公司
WWW.SHERNBAO.COM
SHERNBAO PET PRODUCTS MANUFACTURING CO., LTD.

安全注意事項

- 請不要將本產品去修剪其他物品，僅用于修剪人類及寵物毛發；
- 如在使用過程中不小心將電推剪掉入水中或者碰到化學藥品，請立即拔掉充電線，關機并清理干净主機；
- 請使用原廠USB充電線，如發現USB充電線有破損請不要繼續使用，并請及時更換原裝配件；
- 主機內配置充電電池，此電池不能被扭曲、拆解或者戳破，否則可能導致線路短路燒壞機器。請不要設法自行拆解本機，如需修理請到指定服務點維修；
- 本產品刀頭可能傷到小孩，小孩也有可能吞嚥小的配件，請將本產品保存時置于遠離小孩能接觸到的位置；
- 刀頭配件屬于結構件，所以請勿自行拆解刀頭彈簧；
- 不要長時間將本機置于 -10°C 以下或 40°C 以上的溫度環境下保存，否則可能損傷電池。

特別注意事項

- 劇烈的碰撞或跌落都容易造成陶瓷動刀片的破碎；
- 為確保刀頭的鋒利度及維持低噪音，請務必經常清潔及潤滑；
- 一次剃較長時間或要剃幾只寵物，也要注意適時關機清理刀片和加油后再繼續使用；
- 如果修剪比較懶的寵物，極有可能導致刀頭迅速變鈍；
- 刀片變鈍，即使清潔和潤滑也不能恢復鋒利時，表示刀頭使用壽命已盡，請更換新刀頭；
- 請認准原廠配件。

簡易故障排除

| 狀況 | 檢查部位 | 處理方法 |
|-------------------|--------------------------|--------------------------|
| 使用時夾毛、卡毛 | 刀片鋒利度是否已磨耗 | 更換新刀頭 |
| 刀片發燙 | 是否單次連續工作時間太長 | 暫停使用，冷卻并加潤滑油 |
| 噪音明顯偏大 | 刀頭是否夾雜很多毛發或干澀 | 清潔毛發碎屑，加潤滑油 |
| 充電指示燈不亮 電池未被充電 | USB供電端是否正常 USB充電線是否斷裂 | 嘗試其它USB供電端 更換新的USB充電線 |
| 仍有其它故障 | | 請送修 |

P/N: ZS9752401001 VER: V01

①

②

③

④

 
常規操作說明

充電操作說明
如右圖所示，對主機進行連接即可進行充電（電量不足時也可以帶機立即進行操作使用）。

- ◆ 充電過程中LED燈狀態
充電過程中充電提示燈持續閃爍，充滿電后，高電量檔位燈常亮，其它提示燈熄滅。

開關機操作說明
輕按開關按鍵，即可對主機進行開關機操作。


- ◆ 使用過程中LED燈狀態
開機后，對應電量檔位燈亮起，可使用時間少于10分鐘時，充電提示燈開始閃爍，無電狀態時主機停止運行，LED燈全部熄滅。

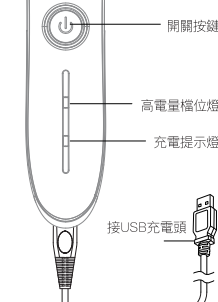

刀頭拆卸、保養及安裝方法

清潔刀頭前，請務必先斷開主機電源及移除充電線。

 - ◆ 拆卸刀頭
如圖所示，用拇指按壓即可拆下刀頭。（注：在拆卸刀頭時，請用另一只手接住刀頭，防止刀頭跌落損傷。）
- ◆ 保養刀頭
如下圖所示，按住刀架頂部，用清潔刷清潔上下刀片之間殘留的毛發，清潔完后在如下圖所示○5個位置注入1-2滴潤滑油。（注：在保養刀頭時，請不要分解刀頭彈簧，可能會引起故障。）
- ◆ 安裝刀頭
如圖所示，將刀頭對准主機相應位置向下按壓即可裝入刀頭。

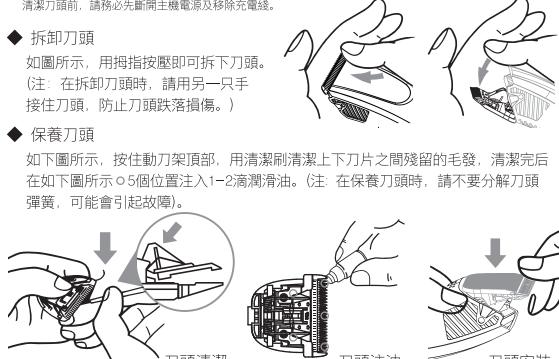

保修條例

- 在正常使用、保養狀態下，主機保修一年；
- 消耗性產品或零件如刀頭、USB充電線、潤滑油、毛刷等不在保修之列；
- 在保修期內，若有下列狀況之一，恕不免費修理：
 - 未按使用說明書要求使用、維護、保養而造成故障或損壞的，（如跌落、浸水、自行拆裝等人為損壞等）。
 - 因自然災害等不可抗力因素、購買后運輸、保管不當等所造成之損壞；
- 本保修卡為重要保修憑證，請勿遺失，恕不補發，請妥為保存；
- 對於無保修卡或超過保修期的產品，本公司實行合理的收費修理；
- 需修理（含保修）時請將產品直接送至神寶公司或指定售後服務點，本公司及銷售商不承擔任何因送修產生的交通及運輸費用，也不承擔任何其它間接損失；
- 由于產品的不斷跟新換代，本公司保留在沒有事先通知的情況下，對產品進行變動、修改的權利。

保修登記

購買日期：
客戶姓名：
聯系電話：

銷售單位印章

如未填寫購買日期或無指定經銷商印章，保修期以出廠日期為起始日！

中國大陸售後中心：上海市松江區同利路319號5号楼201室 電話：4006-588-428
臺灣售後中心：新北市新店區安康路三段525巷37號 電話：(02) 5599-6199

Description

This product is most suitable for trimming some parts of the pet's body, such as the sole of the foot, the underside of the abdomen, the face, the neck, the periphery of the anus, the root of the tail, etc.

- ◆ Features:
 - Ergonomic design.
 - Light weight: 159g (5.6oz).
 - Noise as low as 60dB, reduces dog anxiety.
 - Cord/cordless Universal USB charging use.
 - Run 3 hours after 2 hours quick charge.
 - Precision-machined blades designed for trimming pet hair.
 - Made of stainless steel Comb Blade and ceramic Shear Blade.
 - Hard and sharp, wear-resisting, safe, long lifespan.
 - Suitable for pet groomers and home users.

Safety Instruction

- The trimmer is for hair trimming only. Do not use the trimmer for anything else than its intended purpose.
- If the trimmer falls into water or touches chemicals. Unplug and turn off it immediately, then dry and clean it.
- Never use the trimmer when the original USB is damaged. Replace a new one timely.
- The battery inside the trimmer can't be deformed, disassembled or punctured. Otherwise, it may result in circuit shortage, then burn the trimmer. Do not attempt to repair or disassemble by yourself. Send to an Authorized Service Center for repair.
- Children may swallow small accessories of the product and being hurt. Keep the product away from the child.
- The blade is structural part, do not disassemble the blade spring by yourself.
- Store the trimmer at -10°C - 40°C (14°F - 104°F), otherwise may damage the battery.

 
Notice

- Violent bumping or dropping can easily break the ceramic shear blade.
- Please clean and oil the blade frequently to keep it sharp and less noisy.
- If you have to groom for long time or groom a few pets, better to take a break to clean and oil the blade instead of continuous use.
- It will be easier to blunt the blade if groom dirty pets.
- Replace a new blade if the blade is still blunt after cleaning and oiling.
- Only use the original parts.

Operation Instructions

Charging Instructions
As shown in the picture, connect the trimmer to USB power supply for charging. (The trimmer can be operated while charging even if the battery is low).

- ◆ Charging Indicator Instruction
When charging, the light "②" is lit up and keeps flashing;
After fully charged, the light "①" stays on and the light "②" is off.

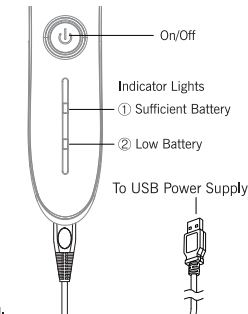


On/off Operation Instructions
Press the On/off to operate the trimmer.

- ◆ LED Indicators Operating Status
Turn on the trimmer and the upper light stays on. Between 0-10 min of usage, the light "②" starts flashing and stays on during the remaining usage time. The trimmer can keep working until run out off battery, then all lights are off.

Blade Disassembly, Maintenance and Assembly

Unplug and remove the USB charging cable before cleaning the blade.

 - ◆ Blade Disassembly
As shown in the picture, use your thumb to push off the blade of the trimmer outwards. (Note: Hold the blade with another hand while disassembling it.)
- ◆ Blade Maintenance
As shown in the picture, clean hair with cleaning brush, press and hold the top of the Shear Blade holder. After cleaning, inject 1-2 drops of oil in the 5 positions shown in the picture. (Note: Do not disassemble the blade spring, disassembling may cause malfunction.)
- ◆ Blade Assembly
As shown in the picture, press down to assemble the blade in position.

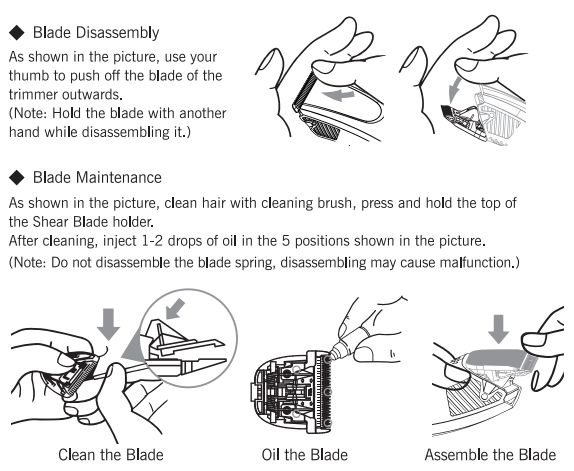

Initial Inspection

| CONDITIONS | INSPECTIONS | SOLUTIONS |
|---|--|---|
| Stuck with hair while running | Check if the blade is blunt. | Replace a new blade. |
| Hot blade | Check if it works continuously too long. | Take a break, cool it down and apply oil. |
| Loud noise | Check if the blade is lack of lubrication or stuck with too much hair. | Clean the blade and apply oil. |
| LED indicators do not work and the battery can't be charged | Check your USB power supply output and if the USB charging cable is damaged. | Try another USB power supply or replace a new USB charging cable. |
| Other malfunctions | | Send to Authorized Service Center for service. |

One Year Warranty

- The trimmer is warranted against defects in materials and workmanship for one year from the original date of purchase.
- Warranty does not cover consumable parts like blades, USB charging cable, lubrication oil, brushes, etc.
- Warranty does not cover abuse, damage from improper or lake of maintenance, accidents, acts of war, acts of nature, transportation damages, etc.
- For products beyond the warranty period, the seller may charge a certain maintenance fee.
- Please ship PREPAID to Shenbao Company or the designated after-sales service supplier. Warranty does not cover shipping or transportation costs and any other indirect losses.
- Due to the continuous upgrading of products, Shenbao reserves the right to variate and modify products without prior notice.
- For more after-sales service policies and service provider information, please contact us: info@shernbao.com or visit Http://www.shernbao.com

- ◆ If proof of purchase date cannot be provided, the warranty validates from ex-factory date.


1 材质：
80G书纸材料

3 印刷颜色：
正反单黑印刷

2 成品尺寸：
80*200mm (外径)

4 注意事项：
印刷内容清晰易识别、大货来料

表面不能有脏污、破损，印刷内容与印刷文件不符的情况发生

| | | | | | |
|---|-------|-----|------------|----|----|
|  深圳市阿可美电器有限公司 SHEN ZHEN ACME ELECTRIC APPLIANCE CO., LTD | | | | 制作 | 杨园 |
| | | | | 审核 | |
| 客户 | ACME | 品名 | 说明书 | | |
| 型号 | A1 | 日期 | 2020-03-03 | 批准 | |
| 版本号 | 10156 | 版本号 | V 1.1 | | |