



Groomapedia
by BOTANY BAY IMPORTS EXPORTS

Shear Magic Tuffy 3800

PROFESSIONAL CORDLESS LI-ION CLIPPER

The Shear Magic Tuffy 3800 Professional Clipper is a cordless high performance grooming clipper that gets through tough coats. This heavy duty 2 Speed cordless clipper features a detachable Lithium-Ion battery that runs up to 4 hours providing the freedom of movement you need. The Shear Magic Tuffy 3800 is compatible with all A5™ detachable style blades, including wide blades.

FEATURES & BENEFITS

- Powerful Two Speed Heavy Duty Motor
- 2 Speed – 3,800 and 3000 strokes per minute
- Ergonomic design for easy hold and maneuverability
- Great for body clipping and detailing
- High power, environmentally friendly, Lithium-Ion battery provides continuous power and holds a longer charge.
- Compatible with all brands of A5 style detachable blades, including the Shear Magic wide detachable blades
- Dual port supercharger – allows fast and normal speed charging

EXTRA INFO

Model	Shear Magic Tuffy 3800
Code	T3800
Blade Type	Compatible with all A5 style detachable universal blades
Stokes per minute	3,000 and 3,800 (Two-Speed)
Motor type	DC Rotary Motor 12V
Battery	Lithium Ion 4hr
Charge time	Fast Charge: 180 minutes Slow Charge: 240 minutes
Watts	24
Clipper weight	360g (without blade)
Warranty	2 years against any manufacturing fault

LED SIGNAL DISPLAY

Clipper:

- Low Speed – Red light
- High Speed – Green light
- Low Battery – Red light twinkling
- Overload – Red light quickly blinking

Charging Station:

- Charging – Blue light twinkling
- Full Charged – Blue light
- Error - Red light twinkling

KIT INCLUDES:

- Shear Magic Professional Size 10 detachable blade
- Charging station
- Adaptor
- Lubricating oil
- Cleaning brush

Clips any dog – must have correct blade and clean dog

Shear Magic
PROFESSIONAL

TUFFY 3800

HEAVY DUTY CLIPPER

CORDLESS

Universal – Fits all A5 style Detachable Blades





FAQ

How do I properly remove the blade from my clipper?

Your blade is attached to a hinge assembly. To remove the blade (A5 detachable blade) hold the release latch assembly by manually pushing the latch forward and take the blade away from the clipper head. You can slide the blade off the hinge and replace the new blade on the hinge. Your hinge should stay open 45°. Failing this you have to use a screwdriver to re-open the hinge assembly.



How do I get my blade back on my clipper?

First, ensure that the rectangular metal "tongue" or blade hinge assembly is in standing position or open. If it is closed, insert a flat head screwdriver under the tongue and applying enough force, push the hinge back to standing position. Once this is complete, slide the blade on the tongue, turn your clipper on and push the blade down and snap the hinge assembly closed. This will ensure the proper engagement of the blade on the driving tip. If you have any further questions, please call us.



My blade doesn't cut

Performance of blade – if the lever is worn, this will affect the cutting performance, because it will not throw the cutter sufficiently left to right to do the proper cutting. At this instance lever must be change

How do I grease my clipper?

It is important to check the gearbox to ensure you have enough grease in your gearbox. In order to grease the clipper, remove the casing to access to the gear box. This will allow you to determine if the clipper needs to be greased. If clipper does need grease, use about 1/2 teaspoon. Make sure the grease covers the gears. Most of our products come packed with a grease tube.

Why does my blade rattle on my clipper?

Over time the socket on your blades may have become damaged. Check the "wings" on your blade socket to see if they may be bent outward or broken.



FULL SPARE PARTS AVAILABLE FOR SALE FROM BOTANY BAY IMPORTS

Phone: (02) 4624 8950
info@botanybayimports.com.au
botanybayimports.com.au

Follow us on Social Media

TheClipperSpecialist
 Botany Bay The Clipper Specialists
 botanybayimports



Trouble Shooting

Malfunction	Cause	Rectification
Top blade does not move	<ul style="list-style-type: none"> • Clipperhead is not well engaged • Drive lever is defective 	<ul style="list-style-type: none"> ▶ Engage the clipperhead correctly when the motor is running ▶ Replace drive carrier (*)
Clipper cuts badly or not at all	<ul style="list-style-type: none"> • Clipper blade is blunt • Clipper blades have not been correctly ground • Clipper blades are not oiled • The animal's hair is wet • Hairs jammed between top and bottom blades • Clipperhead has too little clipping pressure 	<ul style="list-style-type: none"> ▶ Have top and bottom blades resharpened by service center (*) ▶ Have top and bottom blades resharpened by service center (*) ▶ Oil clipper blades every 15 minutes ▶ Only clip dry hair ▶ Take off clipperhead, push the top blade half away from the clipperhead, take away hairs between top and bottom blade ▶ Have clipperhead inspected (*)
Motor is not running	<ul style="list-style-type: none"> • Battery flat • Contacts dirty • Faulty battery • Smell of burning from the motor housing. Motor burned out. • Motor and/or electronics faulty • Clipperhead blocked 	<ul style="list-style-type: none"> ▶ Charge battery ▶ Switch clipper off and clean the contacts ▶ Replace battery (*) ▶ Have motor and / or electronics replaced (*) ▶ Have motor and / or electronics replaced (*) ▶ Clean and oil clipperhead
Motor runs very slowly	<ul style="list-style-type: none"> • Clipper blades were not oiled sufficiently 	<ul style="list-style-type: none"> ▶ Oil clipper blades
Running time of a fully charged battery is too short and / or blades are getting hot	<ul style="list-style-type: none"> • Clipper blades were not oiled sufficiently • Flat, not fully charged or faulty battery is being used 	<ul style="list-style-type: none"> ▶ Oil clipper blades ▶ Only use intact, fully charged original batteries
The control light of the charging station is not on	<ul style="list-style-type: none"> • Charging station is not connected to the power supply • Charging station is faulty 	<ul style="list-style-type: none"> ▶ Connect the charging station to the power supply ▶ Have charging station inspected (*)
When charging flat battery the light does not change from one colour to next	<ul style="list-style-type: none"> • Contacts dirty • Faulty battery? • Contacts of the charging station are deformed 	<ul style="list-style-type: none"> ▶ Clean contacts ▶ Replace battery (*) ▶ Have the charging station repaired (*)

*Visit our website for a list of service centres