



Attractive Design Electric LED Pet Grooming Table User Manual

FT-879




Schematic diagram of accessories

1 LED Table Top*1


(Note: The tabletop and frame are already assembled upon leaving the factory.)




2 Grooming Table Frame*1

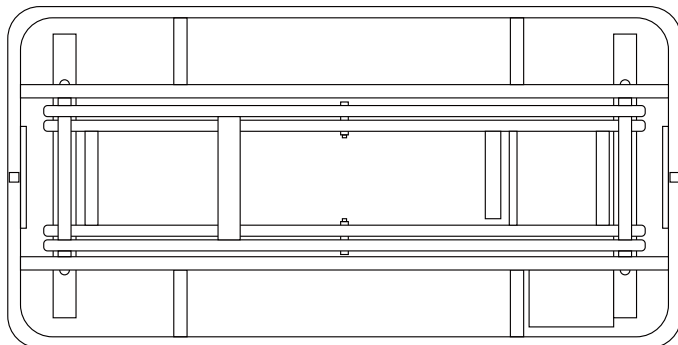

3 Over-head Grooming Arm Set*1

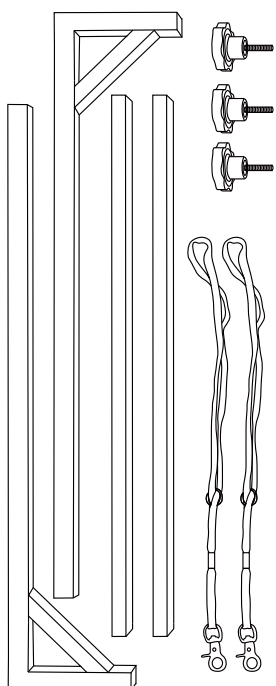


4 M10*25 Handle screw*2




5 Remote Control*1




6 Transformer

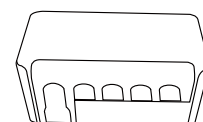

7 ALCI

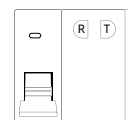

8 Adjustable feet*4

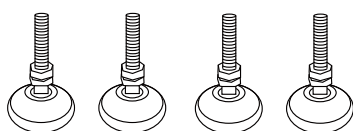

9 Linear actuator 220



10 Foot pedal




FT-879

Accessories


List	Model No.	Spare Parts Name	QTY
1	FT-879-01	LED Table Top	1
2	FT-879-02	Grooming Table Frame	1
3	FT-001	Over-head Grooming Arm Set	1
4	FT-012	M10*25 Handle screw	2
5	FT-016	Remote Control	1
6	BTS-T006	Transformer	1
7	FT-015	ALCI	1
8	BTS-T005	Adjustable feet	4
9	BTS-T004	Linear actuator 220	1
10	BTS-T003	Foot pedal	1

The following accessories need to be installed by oneself


3

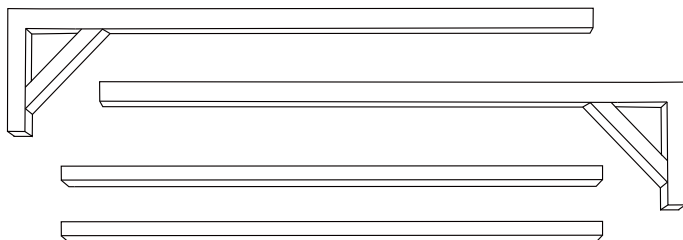

Grooming arm




Snap-in Nylon Neck Harness *2




M8*16 Handle screw *3

4



M10*25 Handle screw *2

8

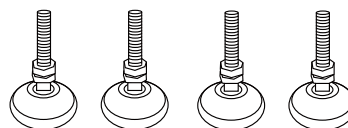

Adjustable feet*4


After receiving the product, please first check if the packaging is severely damaged. Open the packaging and check if the accessories are complete. If there are any quality issues with the product.

FT-879


Installation instructions

Over-head Grooming Arm Set Installation As Below:


- ① Loosen the screws counterclockwise. According to the width of the table, push the arm outward to the appropriate position, and then lock up the top handle screw.

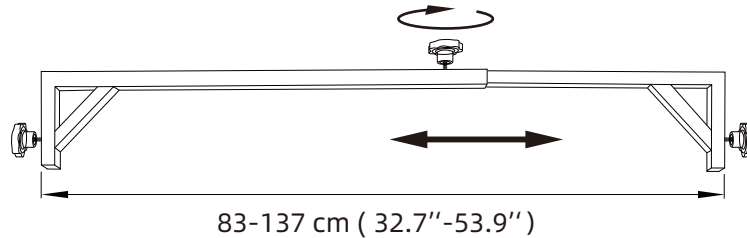

- ② Loosen the screws on both sides of the grooming arm counterclockwise. Insert the arm into the suspension arm separately, and keep the height on both sides consistent, and then lock up the handle screws on both sides.

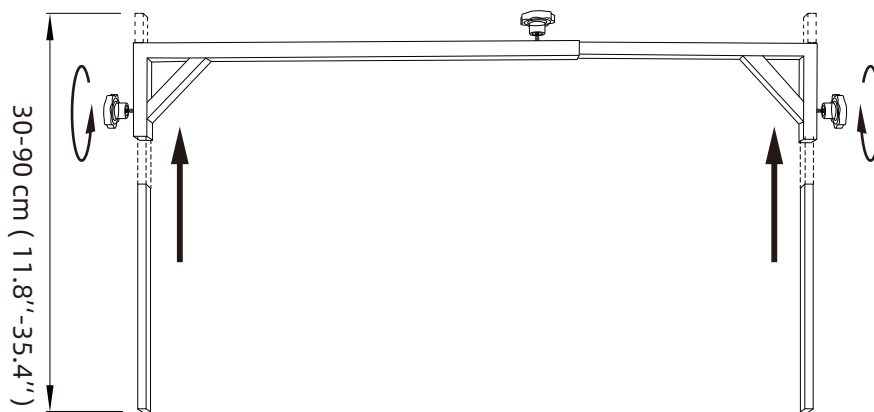


- ③ Use the over-head grooming arm set insert into the two side hole on the table, Leave a length of 4-6cm. Use M10*25 handle screws to fix the two side grooming arms.

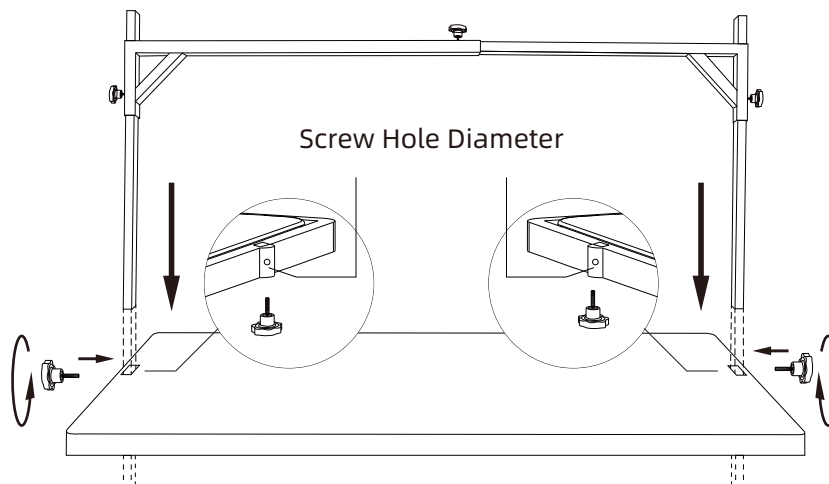


Installation instructions

- ④ Snap-in Nylon Neck Harness, can be locked to the hole above the grooming arm, used to control the pets during the grooming process.

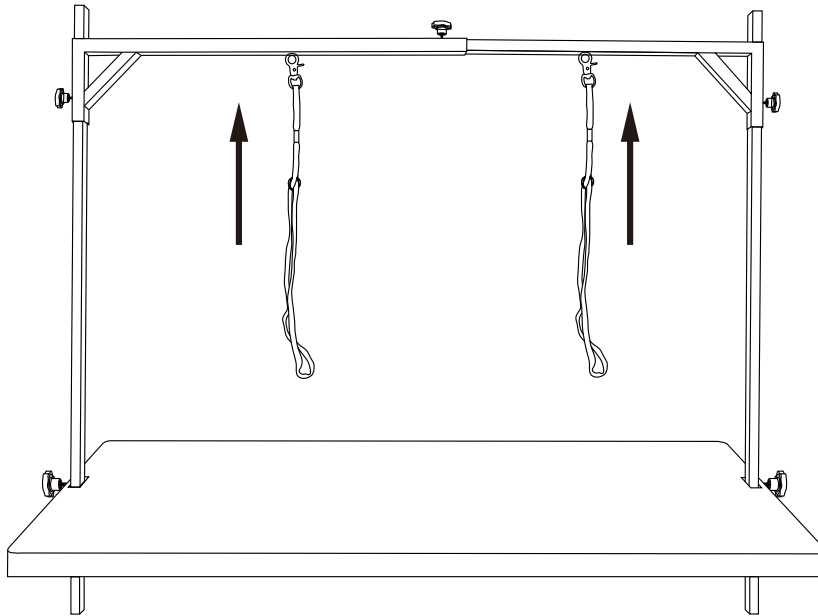


Adjustable Feet Installation Method As Follows:


Install the adjustable feet in the proper position of the base and lock them tightly

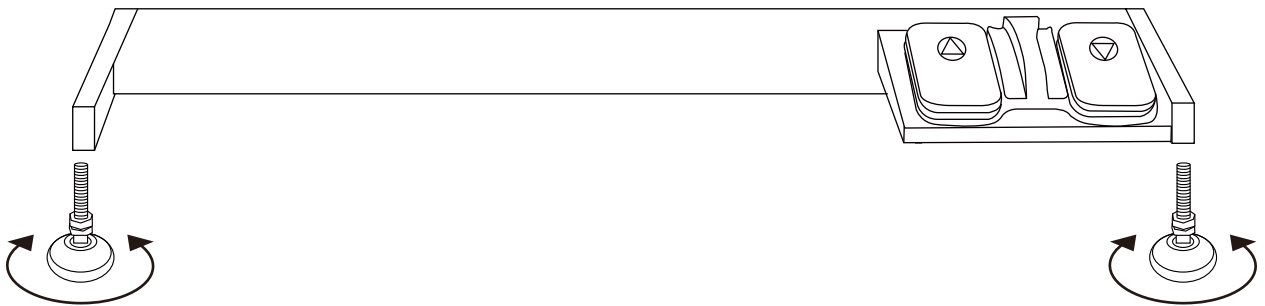

Parameter

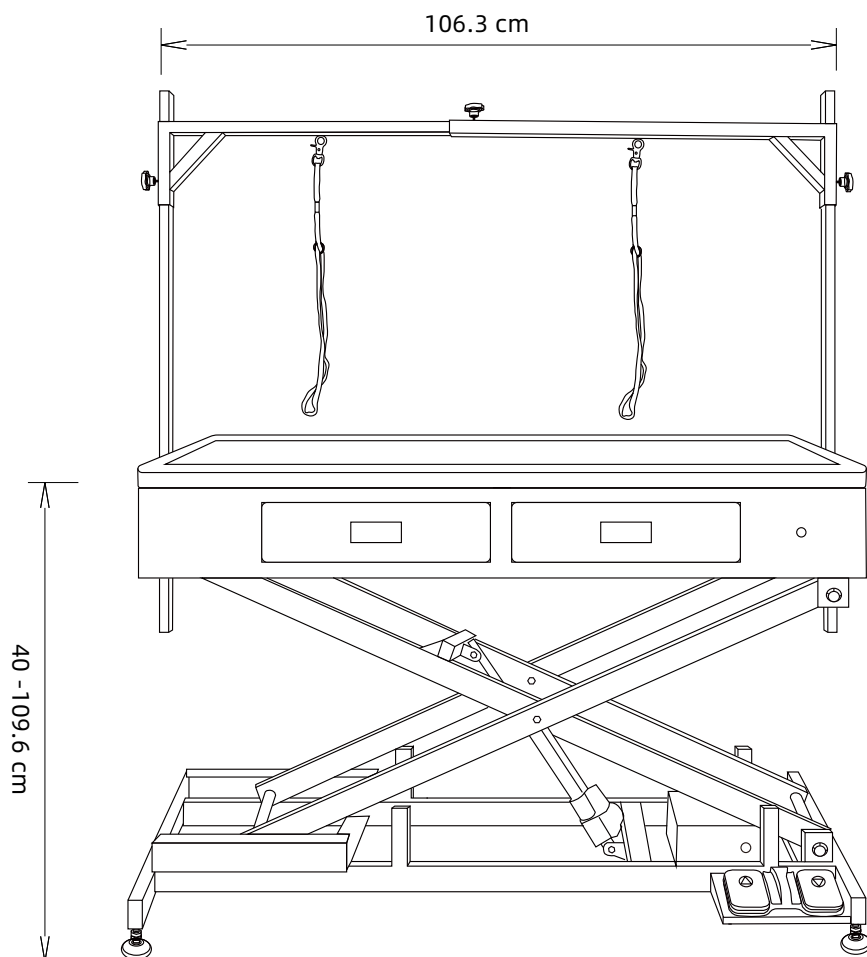

Front view

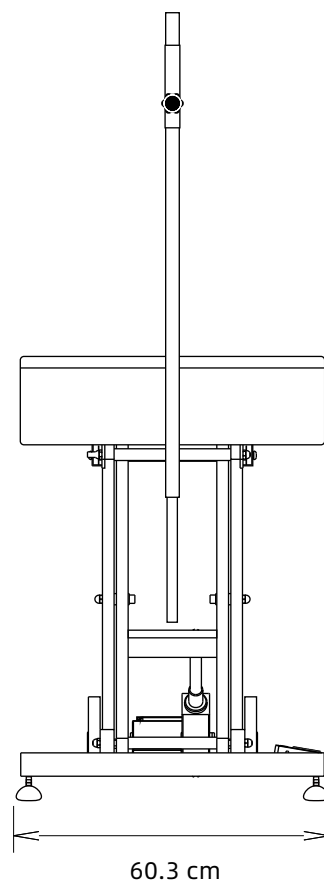


Side view

Type: FT-879			
Net weight(kg)	56	Gross weight(kg)	63.1
Voltage	110-240V	Hose type	0.383
Product dimensions (cm)	106.3×60.3×40 -109.6	Package dimensions (cm)	130.5×71.5×41H

Instructions for use


With four drawers for more space stroage.

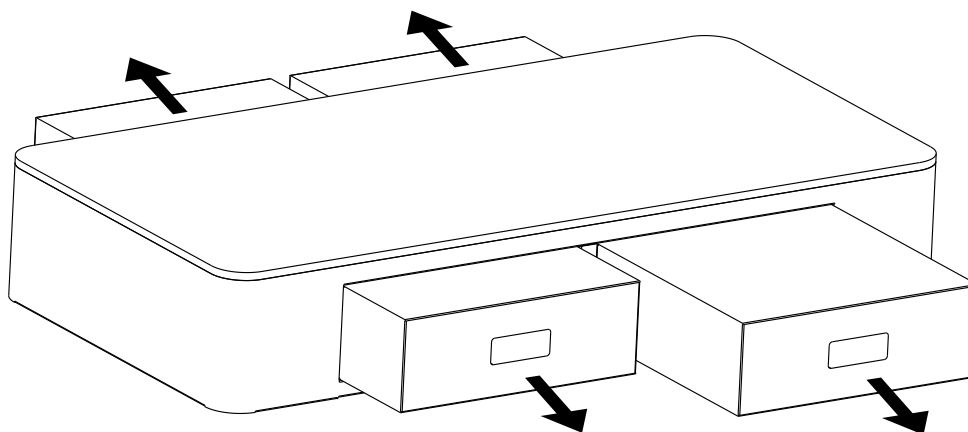


The use of the ALCI is as follows:

Max load power 3000w, IP grade IPX4

Press down
the button to
disconnect

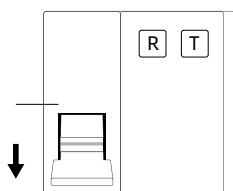


Press up the
button to
connect

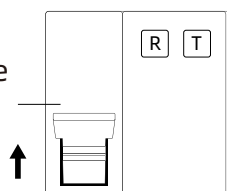

R Press it before close " R " **T** Press once per month

Power socket usage:

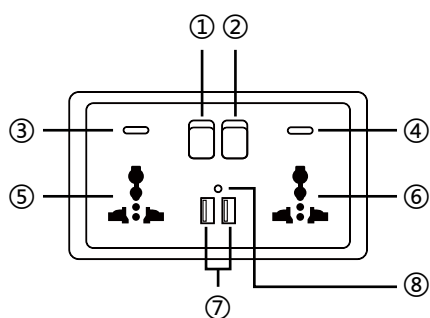

Left side switch①:


Power Socket⑤ and USB port⑦ ON/OFF status
Power Indicator light③ and USB port Indicator light ⑧
display ON/OFF status.

Right side switch②:


Power Socket⑥ ON/OFF status
Power Indicator light④ display ON/OFF status

⑤⑥power socket (Max Power 3000W,
Please do not use the high-power electrical appliance long time)
⑦USB port output 5V 2.1A

Instructions for use

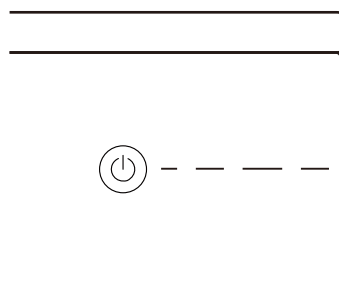


ON/OFF
(Please switch on
this power button
before using the
remote control)

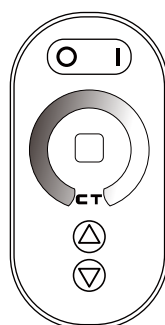



	ON/OFF
	Dimmable Color Adjustment
	Color Temp. Adjustment Hold continuously to adjust the cold/warm colors
	Brightness Adjustment

Adjust the leveler as below:

Rotate the leveler to a suitable height

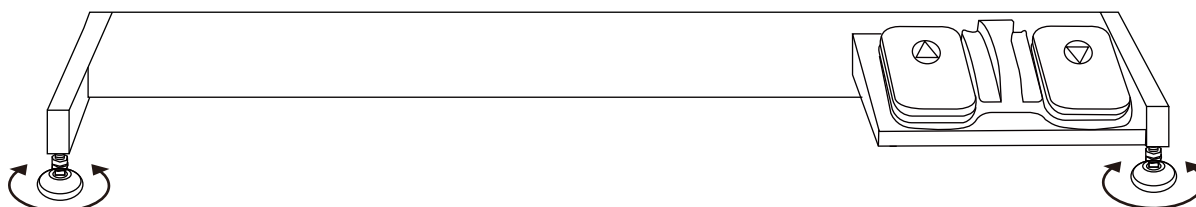

Instruction of foot pedal as below:

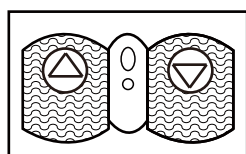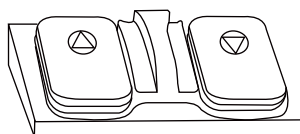

Stepping on the pedal to lift up



Stepping on the pedal to go down

! Note

1. This product is not intended for use by individuals (including children) with physical disabilities, delayed reactions, or mental disorders, unless there is the guardian shall supervise and guide the use of this product from the sidelines, and shall be responsible for the safety of the user;
2. Please do not let children get close to the lifting range of this product to prevent accidents.
3. Please do not disassemble it yourself if there are any abnormalities or malfunctions during use.
4. Do not contaminate with corrosive liquids or solids.
5. If you need to clean the frame and electric parts, you can use a dry towel and a hair dryer to remove any remaining hair on the surface, excrement, water stains, and other dirt.
6. Please check the power cable periodically. If the plug, power cable, or controller is damaged, do not continue to use it.
7. Do not use water to flush the power controller, foot pedal, and linear actuator . Otherwise, the electric control components will be damaged, and even electric shock may occur.